




Toshiba Satellite E45-B4100 RAM Replacement

Instructional guide on how to manually replace the RAM for the Toshiba Satellite E45-B4100. Be sure to have a RAM replacement on hand. Replacing RAM is useful for when wanting to upgrade the storage space on a computer.

Written By: Brendan Sweeney

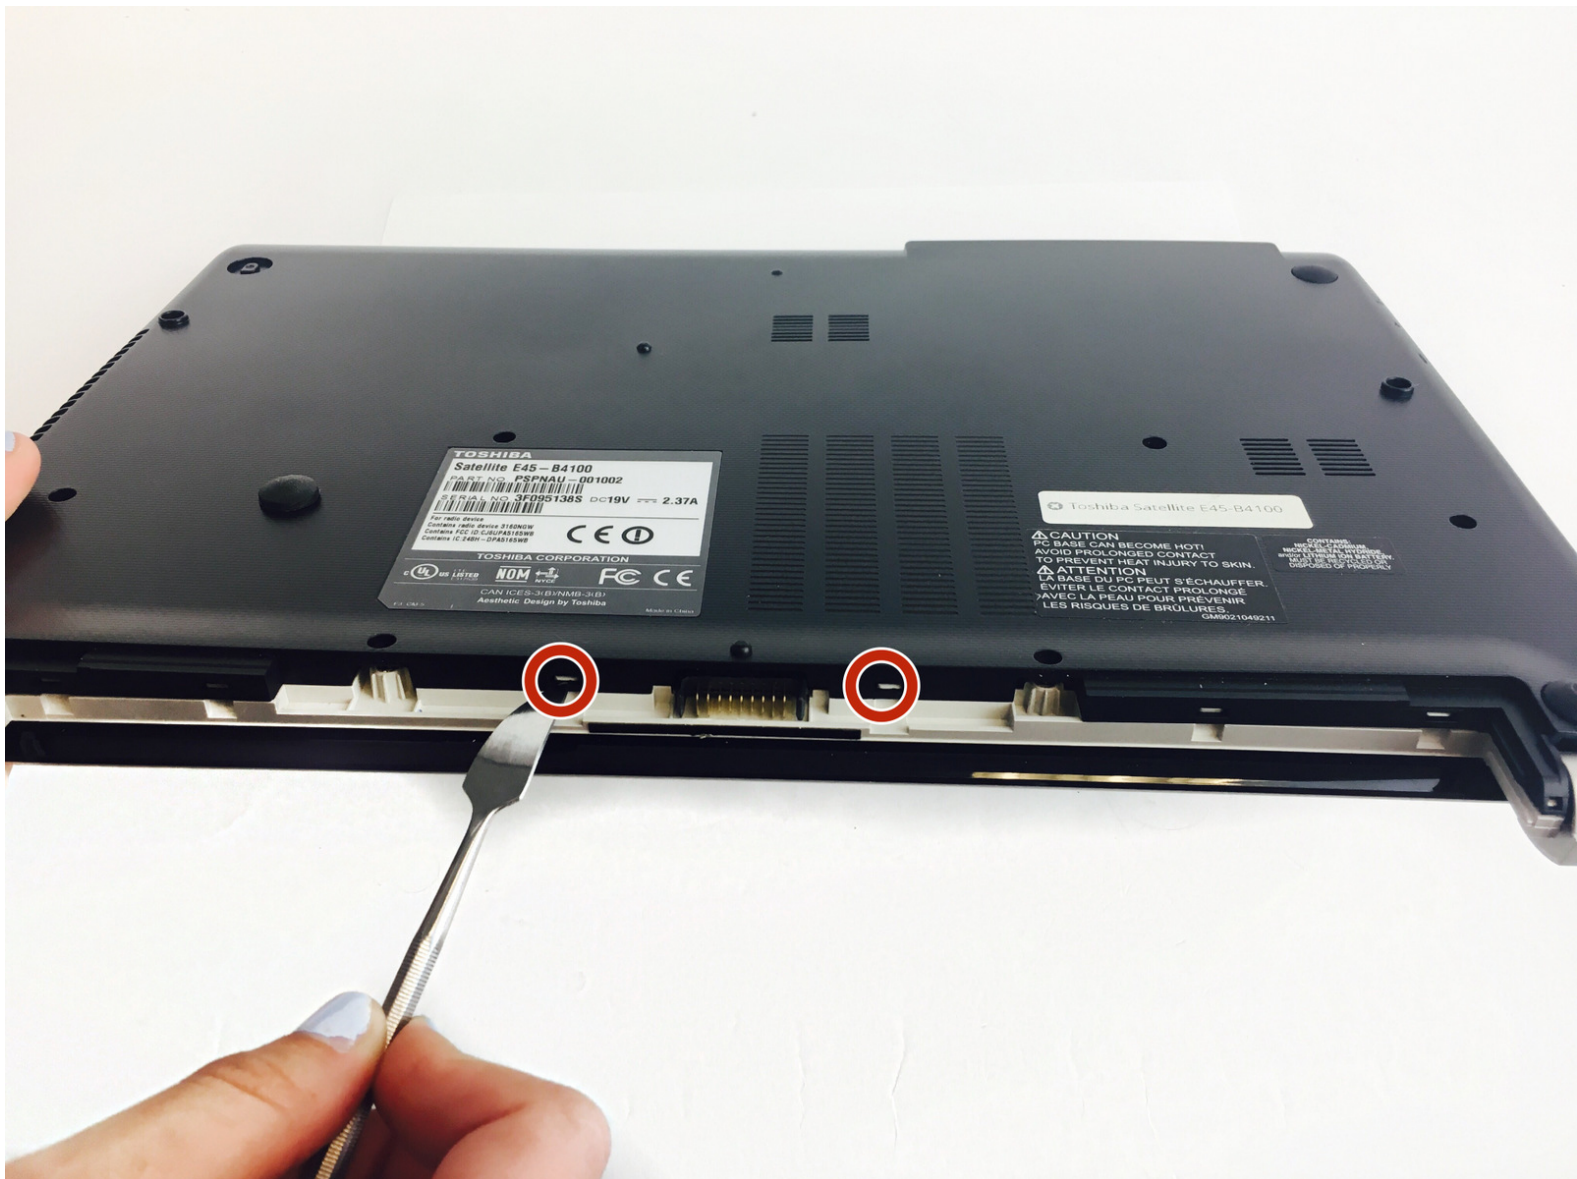




TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery Replacement

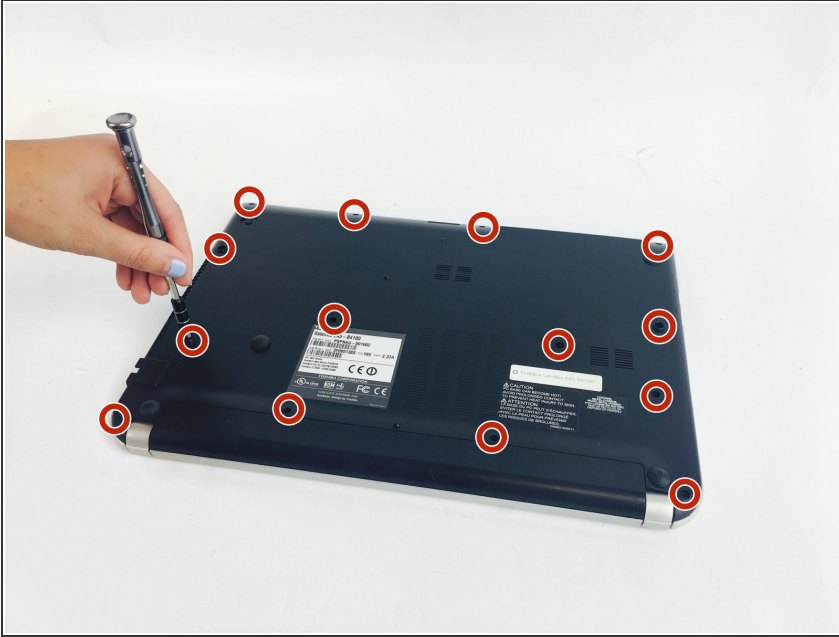


- Remove the fourteen 3.75mm screws with a Phillips #0 Screwdriver as shown.

Step 2



- Gently pull out the battery.

Step 3 — RAM

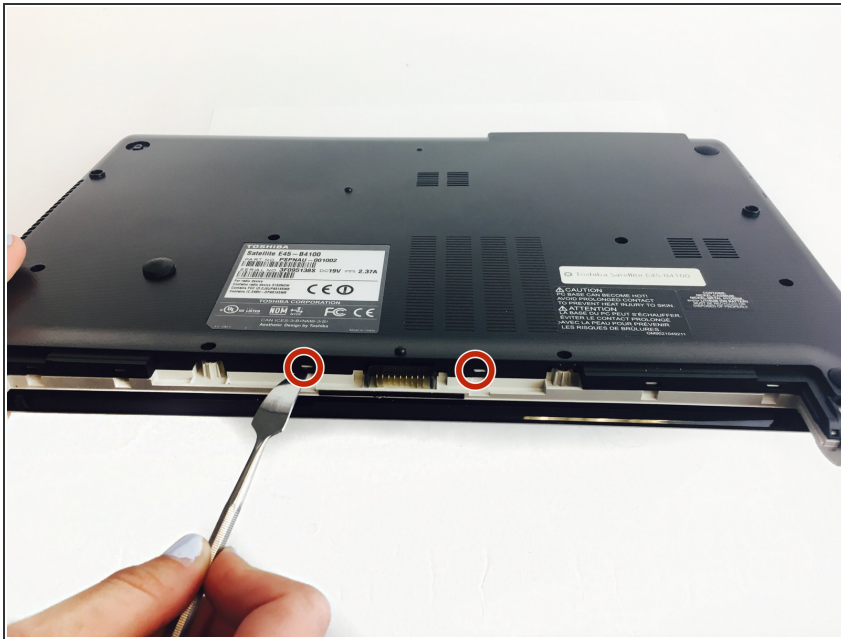

- Using a spudger, poke the white tabs in by the battery until you hear a click.



Step 4



- Separate the laptop by sliding a spudger in between the black and silver covers.

⚠ Be sure to use ESD-safe tools, we recommend iFixit Toolkit.

Step 5

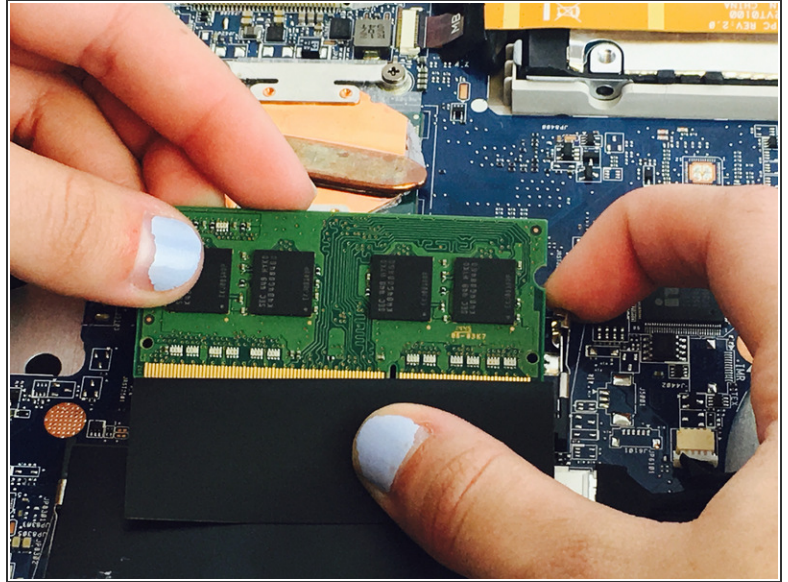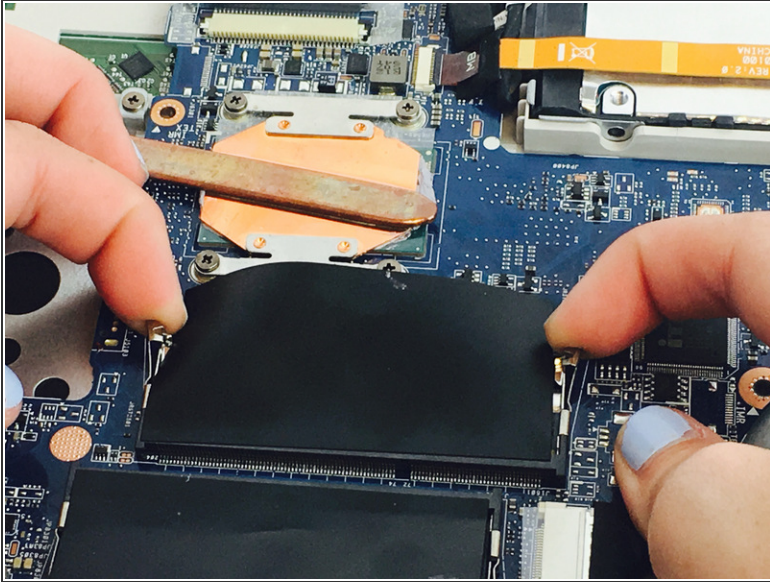

- Pull the two metal brackets out away from RAM unit while simultaneously sliding the RAM unit out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 10:22:42 AM.